

VLF Test Set

VLF hipot tester for Weshine® VLF Test Set with CE certificate, high quality and accuracy, Invented and produced according to national standards, complete electric testing solution available. Contact us for more VLF hipot tester from Weshine!



Weshine® Pour point automatic tester for VLF Test Set

Weshine® VLF Test Set is a compact, robust and portable VLF sine wave test system for medium voltage cables. As an ideal tool for routine cable testing. For 0.1Hz sine wave voltage test and rectangular or DC voltage test, the test kit meets the highest requirements for test voltage quality and stability. In addition, the integrated "breakdown detection" will turn off the test voltage in the event of excessive charging current and ensure limited damage to the cable. Consistent single-button operation combined with complex operating concepts allows rapid and targeted use of the system.

Since the VLF test provides an operating frequency of 0.1Hz instead of the 50/60Hz usually required for field transmission, the physical size of the VLF test device is greatly reduced. Crucially, the test object still receives the AC sinusoidal voltage provided by daily use, but the size of the test equipment is much smaller.

PRODUCT INFORMATION			
Product Name	VLF HIPOT TESTER FOR VLF Test Set		
Model Number	VS-VLF	Output Frequency	0.1 Hz, 0.05 Hz, 0.02 Hz
Output Voltage	30 kV ~ 90 kV	High Test Capacity	5.5 μF
Protection Function	Over-voltage Protection, Over-current Protection.		
Typical Application	Power Cables Below 35 kV; Generators Hipot Test.		
Certificates	CE; EMC; LVD; ISO;	Weight	4+25 kg

Weshine® VLF Test Set Parameter (Specification)

Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: sale09@weshineelectric.com

VLF Hipot Tester

Auto Variable Frequency:


0.01Hz–0.1Hz

voltage:0–80kV



FEATURES

- High and low voltage closed loop negative feedback control circuit.
- Automatic voltage rise and fall.
- High and low voltage photoelectric isolation, safe and reliable.

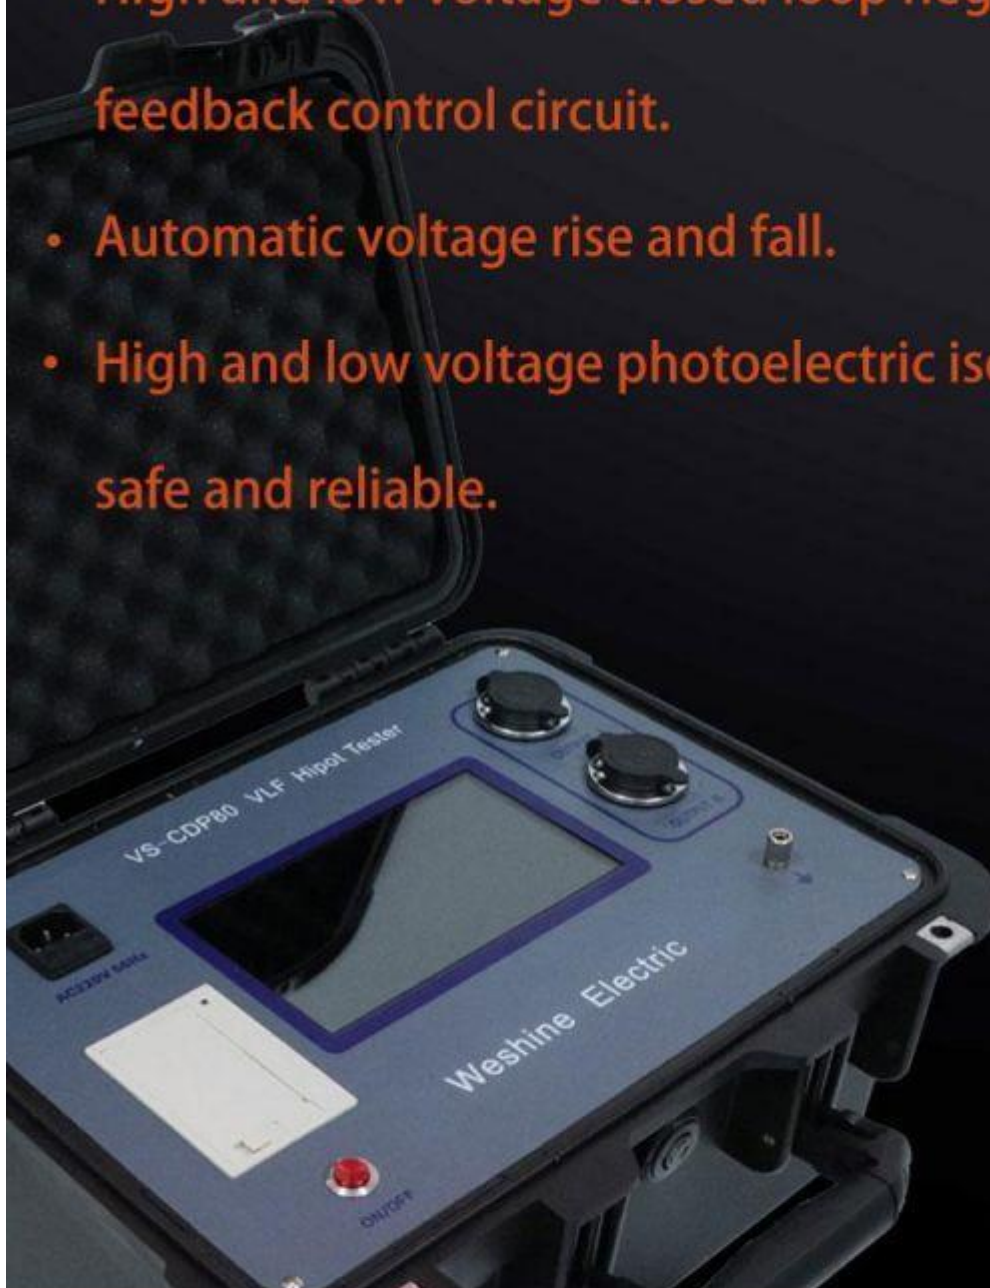

PRODUCT INTRODUCTION



1	Booster	2	pcs
2	HV connection cable	1	set
3	Series connection cable	1	pc
4	Power supply cable	1	pc
5	Discharging rod	1	set
6	Earth cable	2	pcs
7	Capacitor, 0.04 μ F	1	pc
8	Print paper	2	pcs
9	Fuse	2	pcs

10	Control cable	2	pcs
11	Grounding cable	1	pc


LIVE SHOW



Host size:




Booster box size:

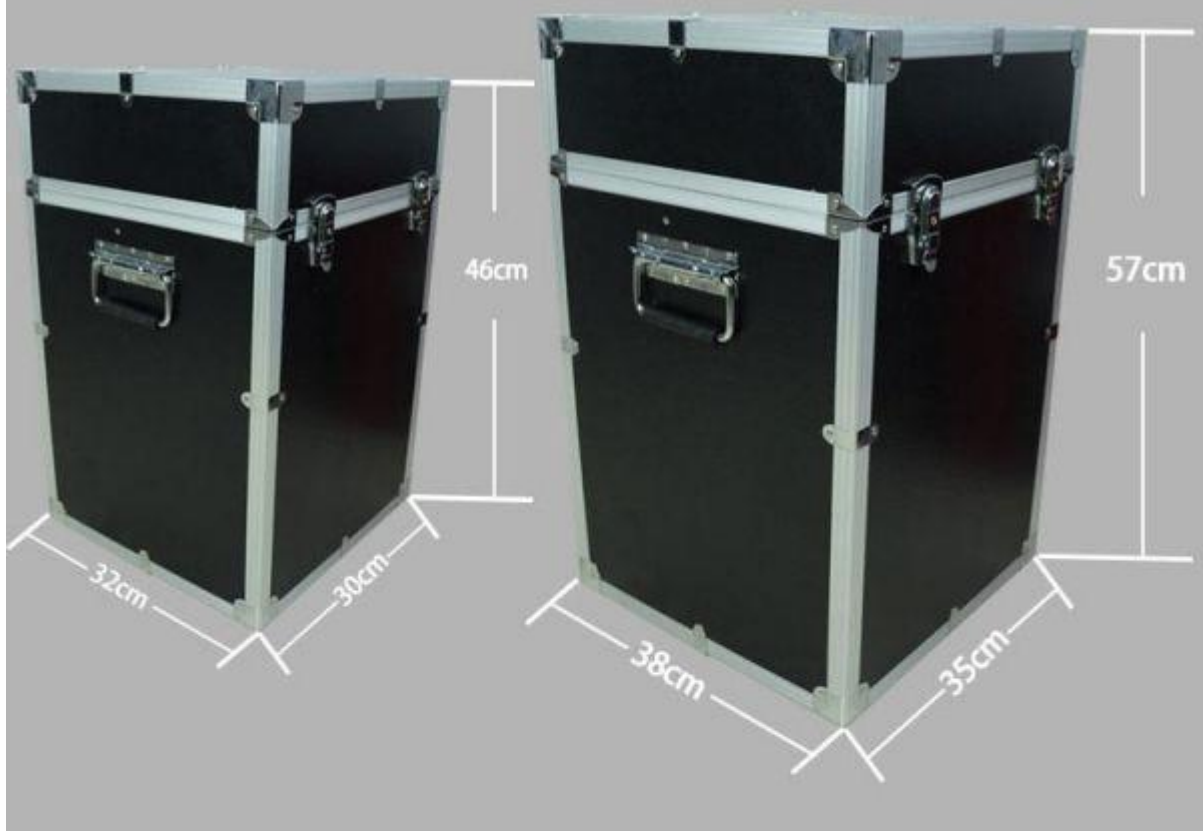

**SUPPORTING
ACCESSARIES**



Wiring

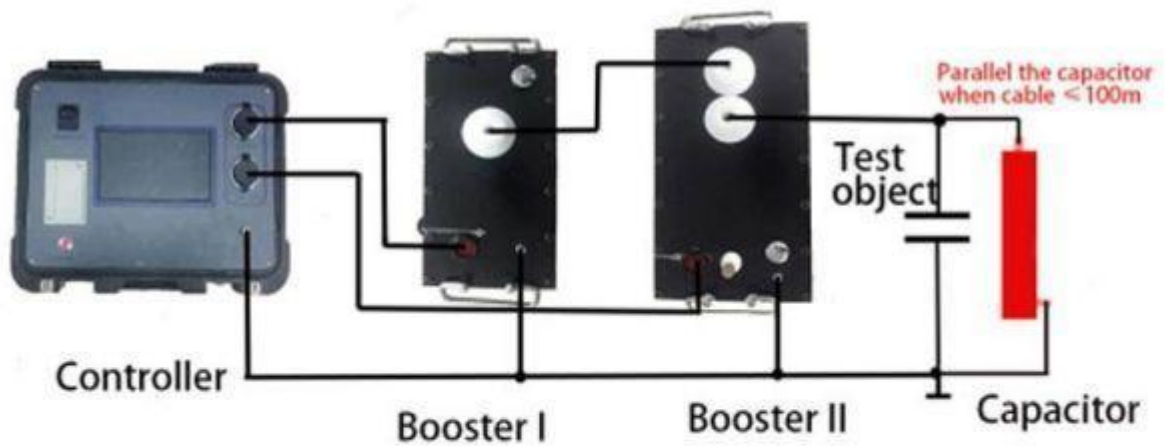

Product size

Quality Certificates

We always believe that all the success of our company is directly related to the quality of the products we provide. **VLF Test Set** meet the highest quality requirements specified in ISO9001, ISO14000:14001 guidelines and our strict quality control system.



Shipment



Weshine Electric Manufacturing Co., Ltd.

Address: Diangu Technology Center, No. 3088, Lekai North Street

Tel: +86-312-3188565

Phone: +86-18731260588

E-mail: sale09@weshineelectric.com



www.weshineelectric.com

For further information on Weshine's Service Solutions, contact our 24/7 online sales representative to get quotes from Weshine.

Contact us

FEEL FREE TO MAKE A PHONE CALL:400 996 1868	OR E-MAIL TO: info@weishengelectric.com
SALES OFFICE Weshine Limited 602, Building 3, Diangu Technology Center, No. 3088, Lekai North Street W/app: +86 1873 1260 588 E. info@weishengelectric.com sale01@weishengelectric.com	CONTACT OFFICE T. 0312 3188565 E. bdweisheng@weishengelectric.com AFTER-SALES SERVICE T. +86 157 1252 6062

Weshine Electric Manufacturing Co., Ltd.
Address:Diangu Technology Center, No. 3088, Lekai North Street
Tel:+86-312-3188565 Phone:+86-18731260588
E-mail:sale09@weshineelectric.com